



Chocolate Fountain



OPERATING INSTRUCTIONS

- Pre-heat fountain by turning on to “high”.
- Place bag of chocolate in microwave, heat at 30 second intervals until chocolate is completely warmed. Manipulate bag at each interval to eliminate hot spots and to create a smooth consistency.
- After warming, remove cap from corner and pour into pre-heated fountain.
- Fountain uses one bag of chocolate a time, only add more when low.
- NOTE: Fondue can be pre-heated and stored in an insulated container for several hours before use.

HOW TO CLEAN

- Immediately after shutting off unit, pour out remaining chocolate.
- Disassemble each “ring” from the center post by removing the rubber washers.
- Remove center post and interior auger.
- Wash exterior AND interior of post.
- Wipe top and bottom of each ring of auger.
- Wipe chocolate drips off the outside of base.
- Dry all pieces immediately after washing and reassemble before placing back into case.
- All detachable pieces (NOT the base) may be put in dishwasher.

How NOT to Clean

- Do NOT immerse the base of this unit in water – it is electrical!
- Do NOT use chemical cleaners – they may corrode the metal.

Refundable Cleaning Retainer - \$75.00

**570-253-8368
450 Old Willow Ave.,
Honesdale, PA 18431**