



Plate-Mate

Operation of Plate-Mate Units

Plating up of Unit: Before you plate up a unit, run your hands down all four (4) sides of column to make sure that the black rubber knobs are securely on the black fingers. This only takes seconds per unit. **Load from the bottom up and serve from the top down.**


REPEAT THE PROCESS FOR EVERY PLATE UP.

The Plate-Mate® will hold any size plate, round, square, rectangular or oval and up to a 13.25 inch platter. The Platemate will hold any type of bowl up to a height of 2”.

The black rubber knobs absorb the shock from a fully loaded unit moving from one area to another, and can be removed for cleaning.

Leveling of Plates: To start this process, turn one (1) of the top screws counter clockwise so as to open the plate securing system. Turn the screw until plate that is going to be used is in a level position between the 2 red shuttles and 1 black finger. Repeat the process with all four (4) screws.

CLEANING PLATE-MATE UNIT: The Plate-Mate® can be cleaned easily with a high pressure hose or simply a brush and soap suds.

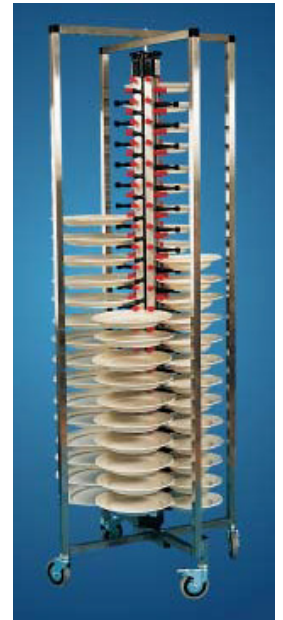

570-253-8368
450 Old Willow Ave.,
Honesdale, PA 18431