



Sno Cone

OPERATING INSTRUCTIONS



- Fill the hopper to within an inch of the top with ice cubes or block ice (no larger than 3" or 4") the larger the pieces, the better the snow!
- Turn the POWER switch to the ON position.
- While pushing the MOTOR switch, apply downward pressure to the pusher handle. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows ice to resettle against the shaver head. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.
- NOTE: Never allow any foreign or metallic objects around the shaver area of the Sno-King machine. Ice picks, scoops, and debris that may be in the ice often damage blades.

RETURNING YOUR EQUIPMENT CLEAN

How to Clean

- This machine should only ever have water/ice in it. Use only hot, soapy water to wash any foreign matter (i.e. syrup), then rinse.
- Wipe interior and exterior of unit completely dry.
- If chute is dirty, gently wipe out while machine is off and unplugged.

How NOT to Clean

- Do NOT use any glass cleaner (i.e. Windex) on Plexiglas
- Do NOT clean the interior of the drain spout
- Do NOT touch or pour anything down the interior of the ice chute.

570-253-8368
450 Old Willow Ave.,
Honesdale, PA 18431